

The powerhouse. Robust and powerful.

## Elmasonic xtra ST






## Elmasonic xtra ST

## Resilient, robust and with two ultrasonic frequencies for one goal – removing the most stubborn dirt.

## Perfect cleaning results.

Elmasonic xtra ST is an ultrasonic device that can remove even the most severe contamination and is therefore ideal for extreme dirt loads in the field of industrial cleaning. With the two selectable ultrasonic frequencies, a diverse range of cleaning tasks can be successfully completed. For stubborn dirt, such as the removal of lapping and polishing pastes, 25 kHz is

selected. At 45 kHz, sensitive surface materials can be gently cleaned and degreased. Different modes, such as Pulse, Sweep and Dynamic, offer more individual options to achieve a perfect cleaning result. The oscillating tanks are made of stainless steel with increased wall thickness and boast a high degree of robustness and durability.

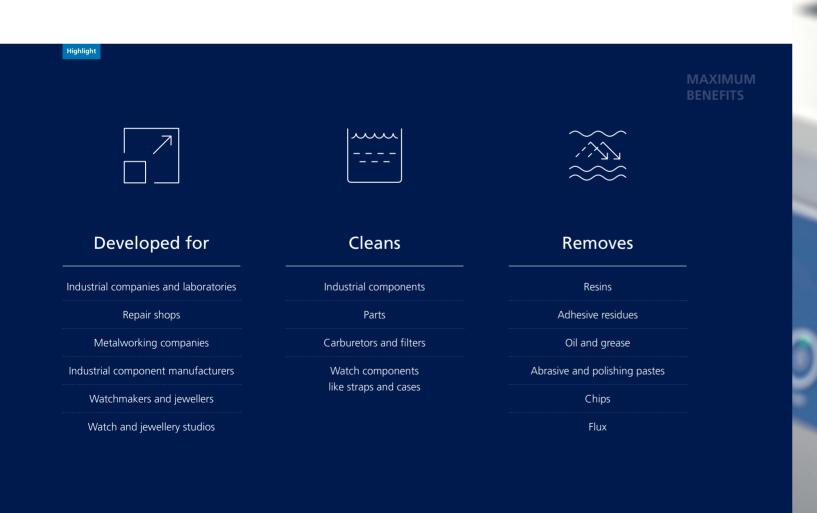







Elmasonic xtra ST

## Extreme demands. Optimal cleaning results. Always user-friendly.

Elmasonic xtra ST, designed for the highest demands, also impresses with its ease of use. All functions and cleaning parameters – ultrasonic frequency, time and heating presets – can be intuitively configured via the splash-proof control panel on the front. The panel also ensures easy monitoring of the cleaning process.

Functions

## Sweep function

The preset Sweep function is used for optimum sound field distribution and cleaning performance in all areas of the ultrasonic bath.

## Pulse function

The switchable Pulse function increases the peak ultrasonic power. This removes very stubborn dirt.

## Dynamic function

With the Dynamic function, the Sweep and Pulse functions alternate automatically. The ultrasonic power is temporarily increased by up to 20%. At the same time, the cleaning effect is enhanced due to the uniform ultrasound distribution in the ultrasonic bath.

Highlights

## Individually switchable ultrasonic modes

Switchable multi-frequency device with 25 kHz for the toughest dirt and 45 kHz for gentle cleaning

Durable oscillating tanks made of high-quality stainless steel with increased wall strength



Elmasonic xtra ST

## A powerhouse. Eight different sizes. Various application options.

## Extra powerful.

signed for extreme dirt loads in production facilities, workshops and service centres. With eight different sizes, this series offers a wide range of devices for the most diverse cleaning tasks. Thanks to the special peripherals and accessories, the Elmasonic becomes expansion options.

Elmasonic xtra ST ultrasonic cleaning devices are de- a real powerhouse. This creates new possibilities in terms of mapping the entire process in a highly productive way - from pre-cleaning and the cleaning itself to rinsing, drying or cooling. A wide range of accessories (baskets or noise protection covers) offers practical

## Technical data Mechanical

Elmasonic xtra ST	300H	500H	600H	800H	
Total capacity V (I)	28.8	48.7	56.3	81.0	
Unit external dimensions W / D / H (mm)	655 / 555 / 935	655 / 555 / 935	825 / 595 / 935	825 / 595 / 935	
Tank internal dimensions W / D / H (mm)	290 / 265 / 280	290 / 265 / 480	460 / 295 / 330	460 / 295 / 480	
Opening dimensions W / D (mm)	330 / 300	330 / 300 330 / 300 500 / 330		500 / 330	
Flmasonic xtra ST	1400H	1600H	19005	2500H	

Elmasonic xtra ST	1400H	1600H	1900S	2500H	
Total capacity V (I)	120.3	156.3	186.7	245.1	
Unit external dimensions W / D / H (mm)	935 / 865 / 935	935 / 865 / 935	750 / 965 / 960	1080 / 915 / 935	
Tank internal dimensions W / D / H (mm)	550 / 565 / 315	550 / 565 / 415	410 / 600 / 680	615 / 700 / 485	
Opening dimensions W / D (mm)	600 / 600	600 / 600	410 / 650	750 / 650	

### **Electrical**

Elmasonic xtra ST	300H	500H	600H	800H	1400H	1600H	19005	2500H
Eff. ultrasonic power ± 10% (W)	480	540 / 600	800 / 900	900 / 1000	1440	1600 / 1800	1000	1800 / 2000
Heating power (W)	1400	1400	1400 / 2800	4200	5000	7500	2300	7500





Highlights

Elmasonic xtra ST Accessories

## Always holistic and system-oriented. Elma is redefining ultrasonic cleaning.

The peripherals and accessories for the Elmasonic xtra ST take the entire cleaning process to a new level. They not only increase productivity in the cleaning process – their consistent use also significantly reduces operating costs, increases user-friendliness and protects the environment.

Elma Move: optimal cleaning results via oscillation

Elma Table and Elma Rinse: ideal for pre-cleaning, rinsing, draining and drying

Elma Filter: increased service life of the cleaning bath and more efficient cleaning thanks to dust particle filtering

Elmasteam: perfect for pre-cleaning the most stubborn dirt and for drying

Retrofit: retrofittable for existing Elmasonic xtra ST devices

## **ST Peripherals**

Extras for even greater performance.







Elmasonic xtra ST Accessories

# Oscillation makes it possible to utilise the full power of ultrasound for optimum cleaning results.

## Always on top form.

With Elma Move, the cleaning basket moves vertically through the ultrasonic bath at a rate of nine strokes per minute. In ultrasonic baths, alternating areas of uneven ultrasonic exposure are formed due to the underlying physics. If the items to be cleaned are moved cyclically through these zones with Elma Move, a maximum homogeneous cleaning effect is achieved.

The basket can be loaded with up to 35 kg of items to be cleaned. Elma Move is available in different sizes for all units from the Elmasonic xtra ST 300H to the Elmasonic xtra ST 2500H\*. Existing Elmasonic xtra ST devices can be easily retrofitted.

\*) except the Elmasonic xtra ST 1900S

Highlights

## Freely positionable, user-friendly control panel

Automatic oscillation in the cleaning tanks

Optional attachment frame for noise protection covers



## Elma Move


Expansions for custom requirements.



More space for the items to be cleaned

## Elma Filter

Expansions for individual requirements.

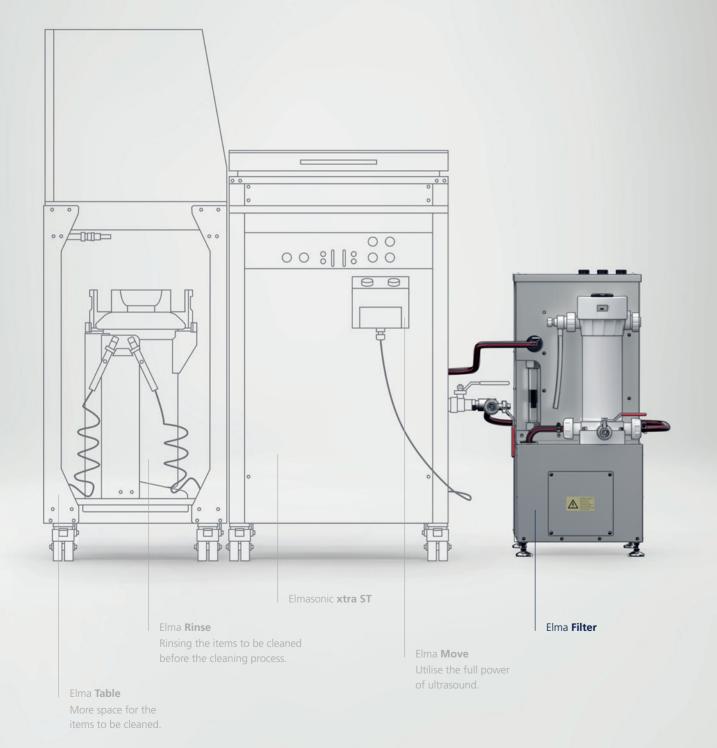



Elmasonic xtra ST Accessories

# Longer bath service life. Minimised tank wear. Higher productivity with lower operating costs.

### Small footprint, mighty cleaning.

With a flow rate of 400 litres/h, the self-suction pump with high availability runs continuously during ultrasonic operation. At the same time, the flow is continuously monitored. The contaminated cleaning bath (including fine particles) is extracted and cleaned via the filter. The cleaned liquid is returned directly to the bath and if the filter needs to be changed this is indicated. The standard filter cartridges (10 inches) can be easily replaced without a service technician. The advantages are obvious as continuous filtration increases


the service life of the cleaning bath. The cleaning bath needs to be emptied and replenished significantly less often, which leads to considerable savings in terms of water consumption and the purchase of cleaning chemicals. By removing particles from the bottom of the tank, it is better protected against erosion. This significantly increases the service life of the tank. The filtered particles can be collected in a targeted manner and recycled, which is particularly advantageous in the case of precious metals.

Highlights

## Self-suction pumps with high availability

## Particle filtering

Increased service life of ultrasonic tanks thanks to particle filtering

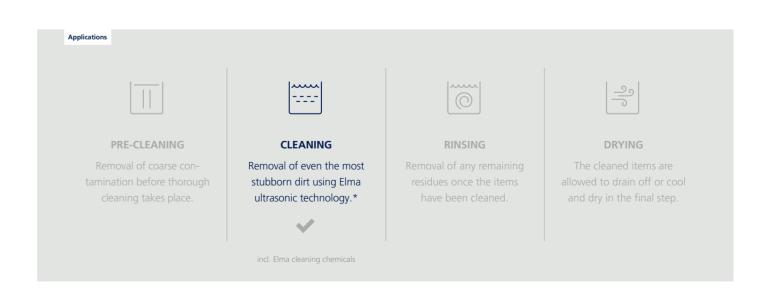



Elmasonic xtra ST Accessories

## Ever practical. Always ergonomic. Flexible cleaning processes.

## Powerful support.

With the Elma Table, you are no longer slowed down by physically separate pre-cleaning and drying processes. After pre-cleaning, the items to be cleaned can be lifted directly from the Elma Table into the ultrasonic bath at the same working height. As soon as cleaning in the Elmasonic xtra ST is complete, the items can be ergonomically lifted onto the Elma Table for cooling, rinsing or drying. The Elma Table is available in three different sizes, including two devices for mobile use


and one for tabletop operation. The device can be positioned to the left or the right of the Elmasonic xtra ST as required thanks to the castors. Depending on how the Elma Table is set up, the splash guard can be easily adjusted at any time. The drip tray has a 3/8-inch drain and is easy to clean thanks to the removable drip trays. The Elma Table is made of high-quality V2A stainless steel and is easy to clean. The Elma Table is simple and easy to set up.

Highlights

## Unit made of brushed V2A stainless steel


## Simple tank construction with 3/8-inch drain

## Space for Elma Rinse or Elmasteam 8

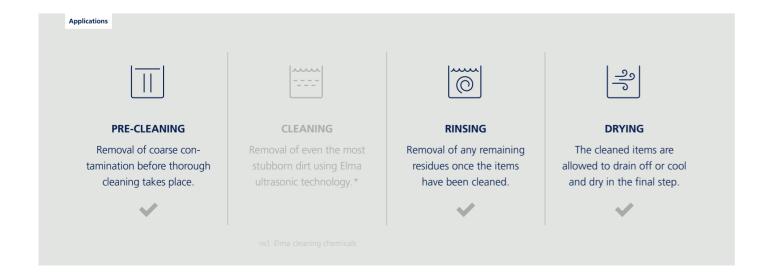


## Elma Table

Expansions for custom requirements.

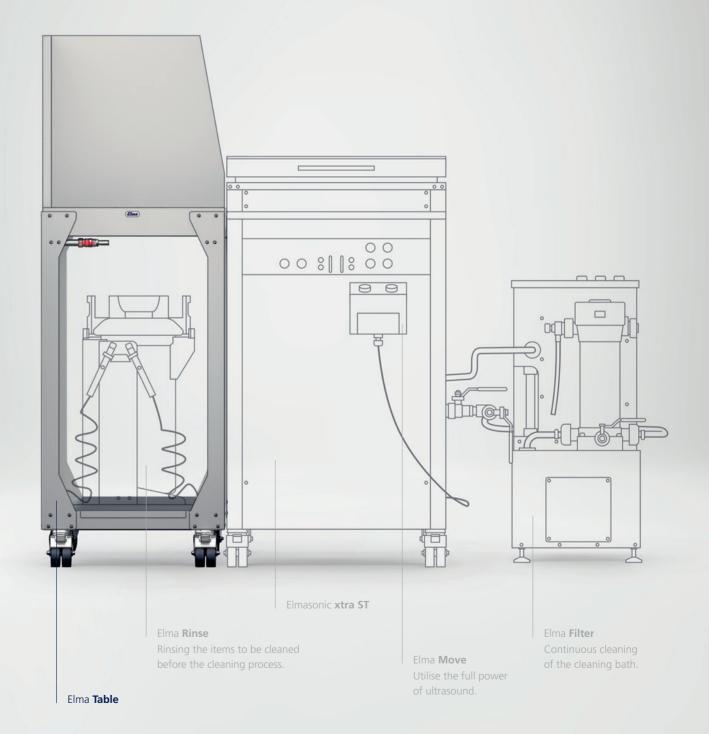

## Elma Rinse

Expansions for individual requirements.

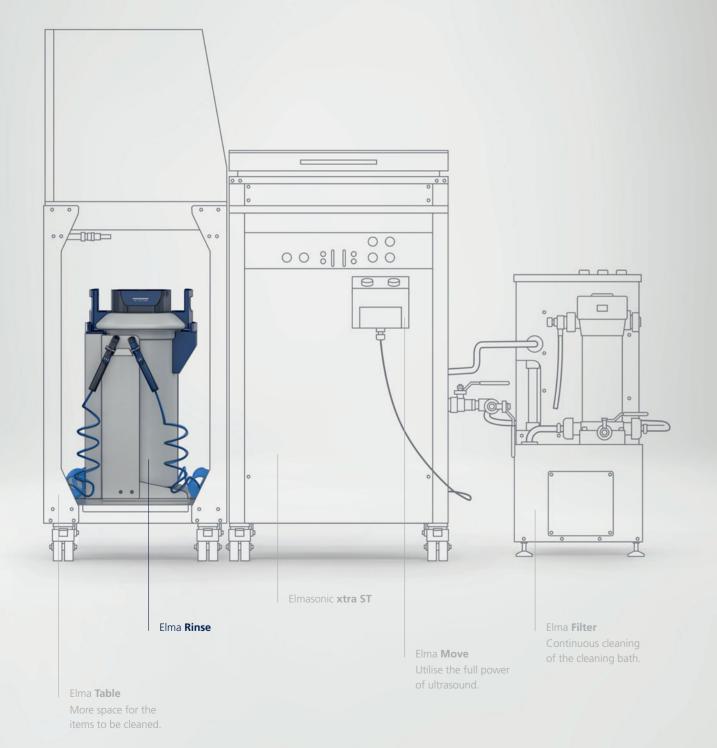



Elmasonic xtra ST Accessories

## With Elma Rinse, rinsing with DM water couldn't be easier. Before and after ultrasonic cleaning.

## Cleaning made easy.

Elma Rinse can be easily integrated into the Elma Table. Alternatively, it can also be mounted to the wall or on a table. The two hand showers are each operated with municipal water or demineralised (DM) water. The hand showers each have 2.3-metre-long hoses and swivel couplings, so they offer maximum flexibil-


ity during the rinsing process. The included cartridge for demineralised water can be replaced accordingly and has a capacity of 1,300 litres at a water hardness of 330  $\mu$ S/cm. Elma Rinse has a flow rate of 300 litres per hour. Elma Rinse increases the quality of the cleaning results with spotless cleaning.

Highlights

Hand showers for rinsing with municipal water and demineralised water

Flexible mounting on the Elma Table, on the wall or under a work table

LED conductivity display for consumption information and cartridge changes

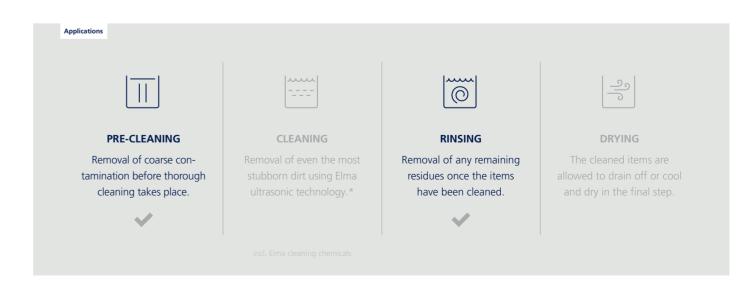



Elma cleaning chemicals

# With the correct dose of Elma chemicals for optimal cleaning results.

In our in-house process laboratory, qualified chemists develop highly effective products for various cleaning processes. These are produced at Elma and put to use in various industries.

**Industry solutions** 

## Elma Luxury Clean

Whether brightening or removing grease, oils or polishing agents – the different products in this series enable first-class cleaning results for watches and jewellery, and ensure the longevity of the materials used.

## Elma Opto Clean

Elma Opto Clean supports the cleaning of eyewear – both plastic and metal frames as well as glass coatings are gently cleaned. Manufacturers of precision lenses benefit from residue-free cleaning results.


## Elma Tec Clean

Elma's range of cleaners is designed for a diverse range of cleaning tasks in industrial parts cleaning.

Subsequent processes, such as coatings, can be carried out safely and to a high quality after ultrasonic cleaning.

## Elma Lab Clean

The range of cleaners for laboratory settings is designed to meet the needs of analytical laboratory instruments and glassware. All cleaners are used for intensive ultrasonic cleaning – this cleaner series is also suitable for laboratory rinsing machines.

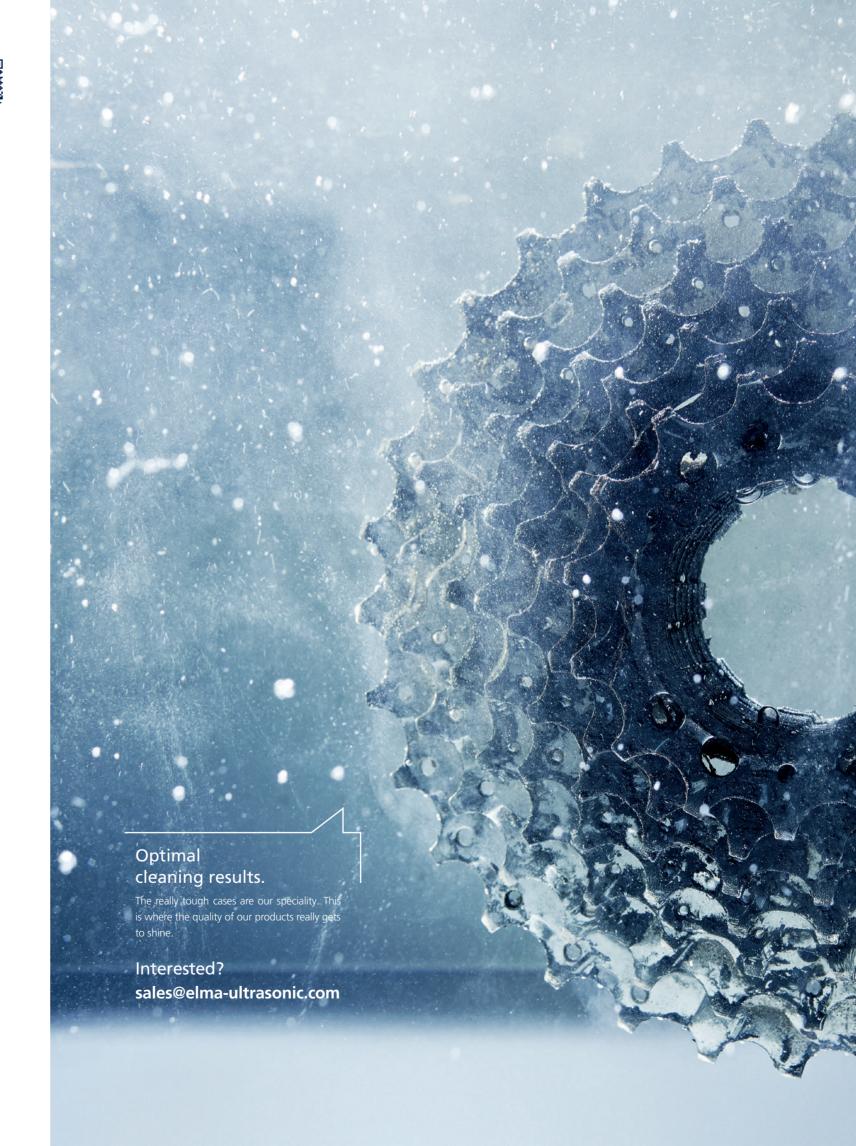



Elma Schmidbauer GmbH Gottlieb-Daimler-Strasse 17 78224 Singen (Germany)

